

RFID Configure

Documentation

2019/11/20
Version 1.0.0

This document describes the RFID Configure software supplied by GIGA-TMS Inc.

DEMONSTRATION SOFTWARE LICENSE

Please read this agreement carefully before you start to install this demonstration software. If you do not agree please stop the installation of the software.

Software developed by GIGA-TMS Inc is provided "AS IS" without warranty of any kind, either express or implied, including, but not limited to, the implied warranties of fitness for a purpose, or the warranty of non-infringement. Without limiting the forgoing GIGA-TMS Inc makes no warranty that:

- The software will meet you requirements.
- The software will be uninterrupted, timely, secure or error-free.
- The results that may be obtained from the use of the software will be effective, accurate or reliable.
- The quality of the software will meet your expectations.
- Any errors in the software obtained from GIGA-TMS Inc will be corrected.

The software and its documentation made available for test or demo purpose

- could include technical or other errors, GIGA-TMS Inc may make changes to the software or documentation made available to shipped with the conjunction products
- may be out of date, and GIGA-TMS Inc makes no responsibility to update such materials

In no event shall GIGA-TMS Inc be liable to you or any third party for any special incidental, indirect or consequential damages of any kind, or any damages whatsoever, including, without limitation, those resulting from loss of use, data or profits, whether or not GIGA-TMS Inc has been advised of the possibility of damage, and on any theory of liability, arising out of or in connection with the use of the software.

The installation of the software is done at your own consideration and risk and with agreement that you will be solely responsibility for any damage to your system or loss of data that results from such activities.

• Install the Program


You can download the setup program from [here](#).

Double click the RFIDCfgSetup.exe to run the install program on your computer.

• Start the Program


To start **RFID Configure** program, do the followings:

1. On the taskbar, click **Start**, and then point to **All programs**.
2. Point to **GIGA-TMS**, and then click **RFID Configure**.

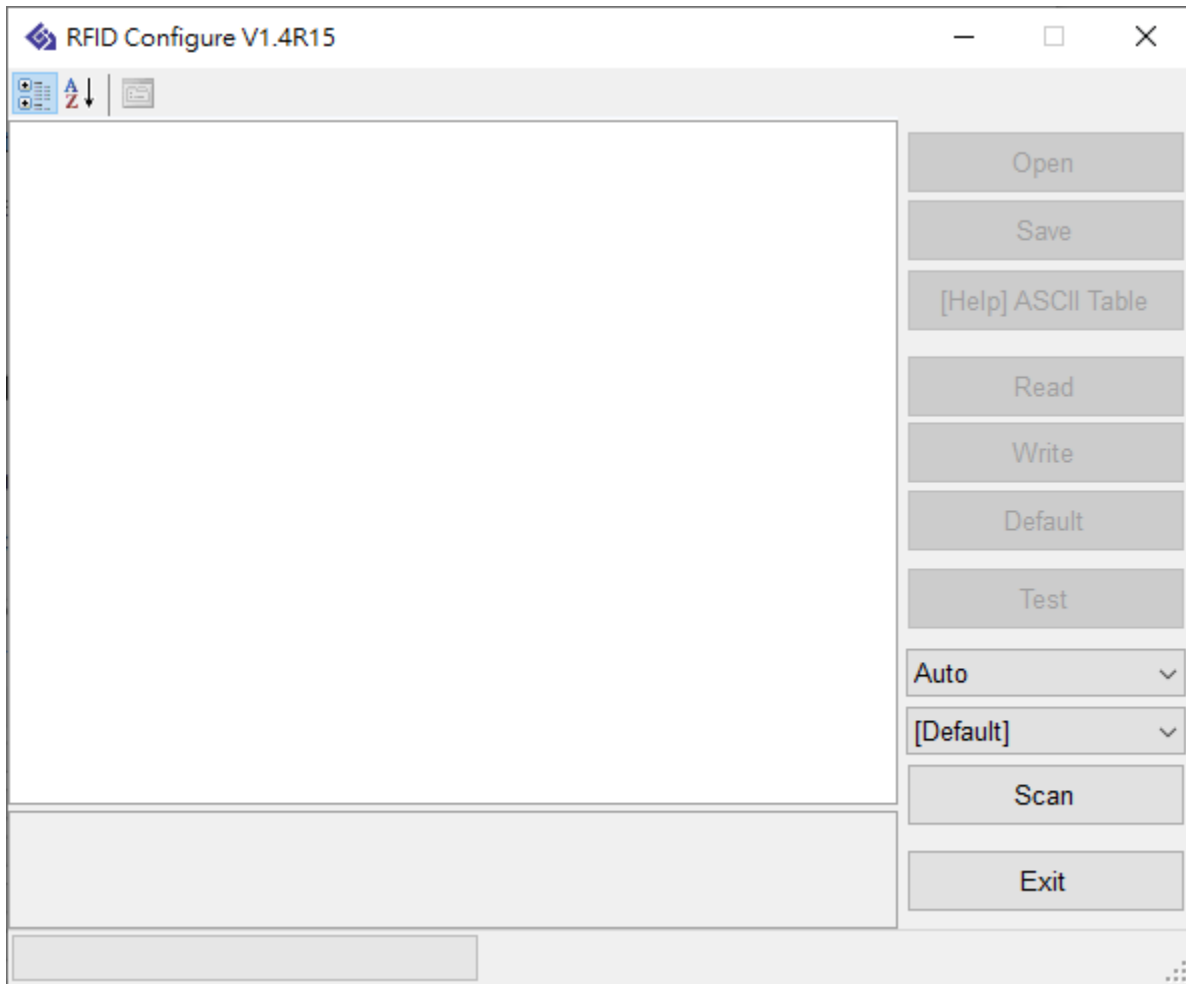


• Using RFID Configure

• Connect to the device

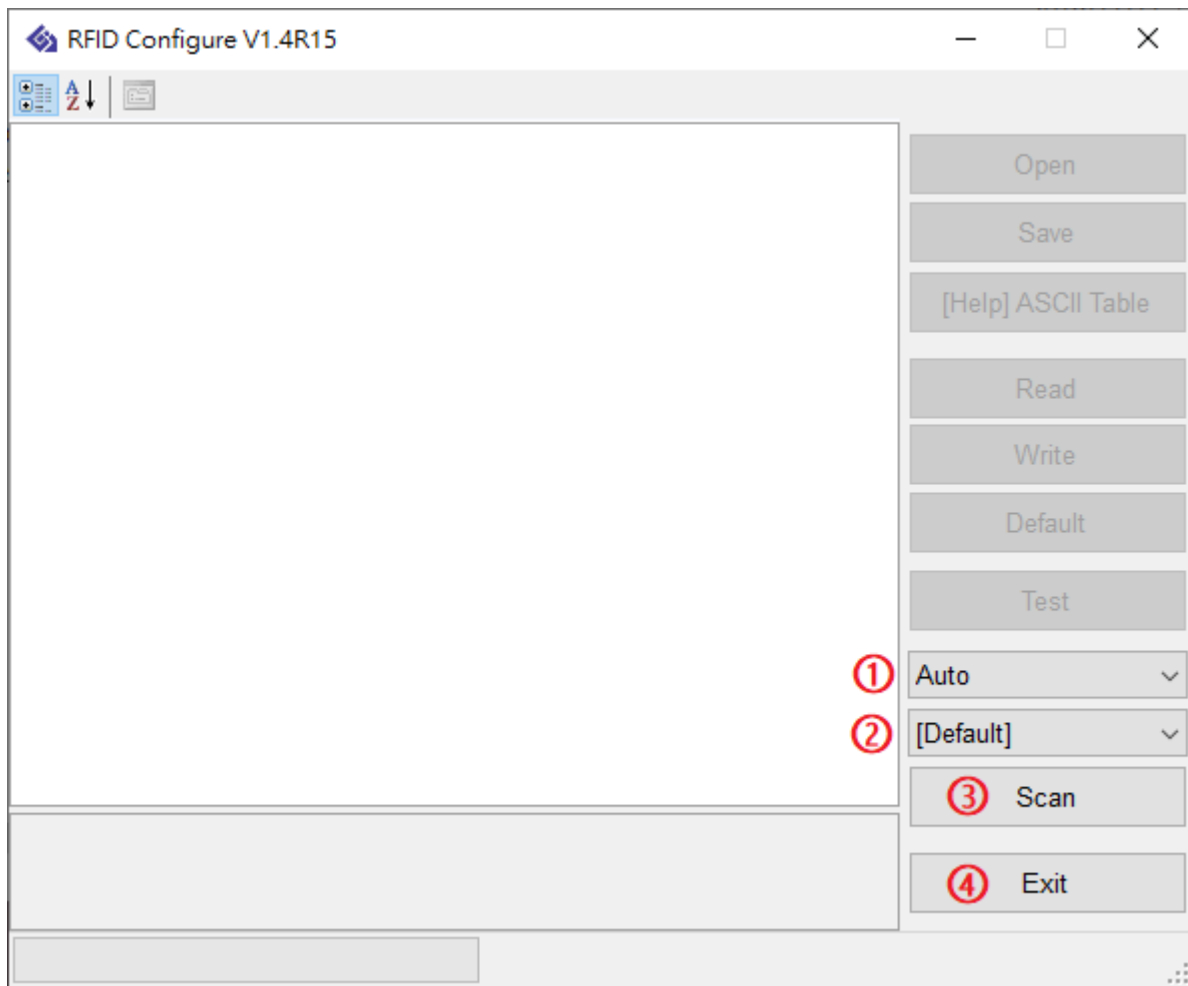


- ① Select the port to connect with the device.
- ② Select the machine ID.
- ③ Scan and connect with the device.
- ④ Exit the program.

· Configure the device

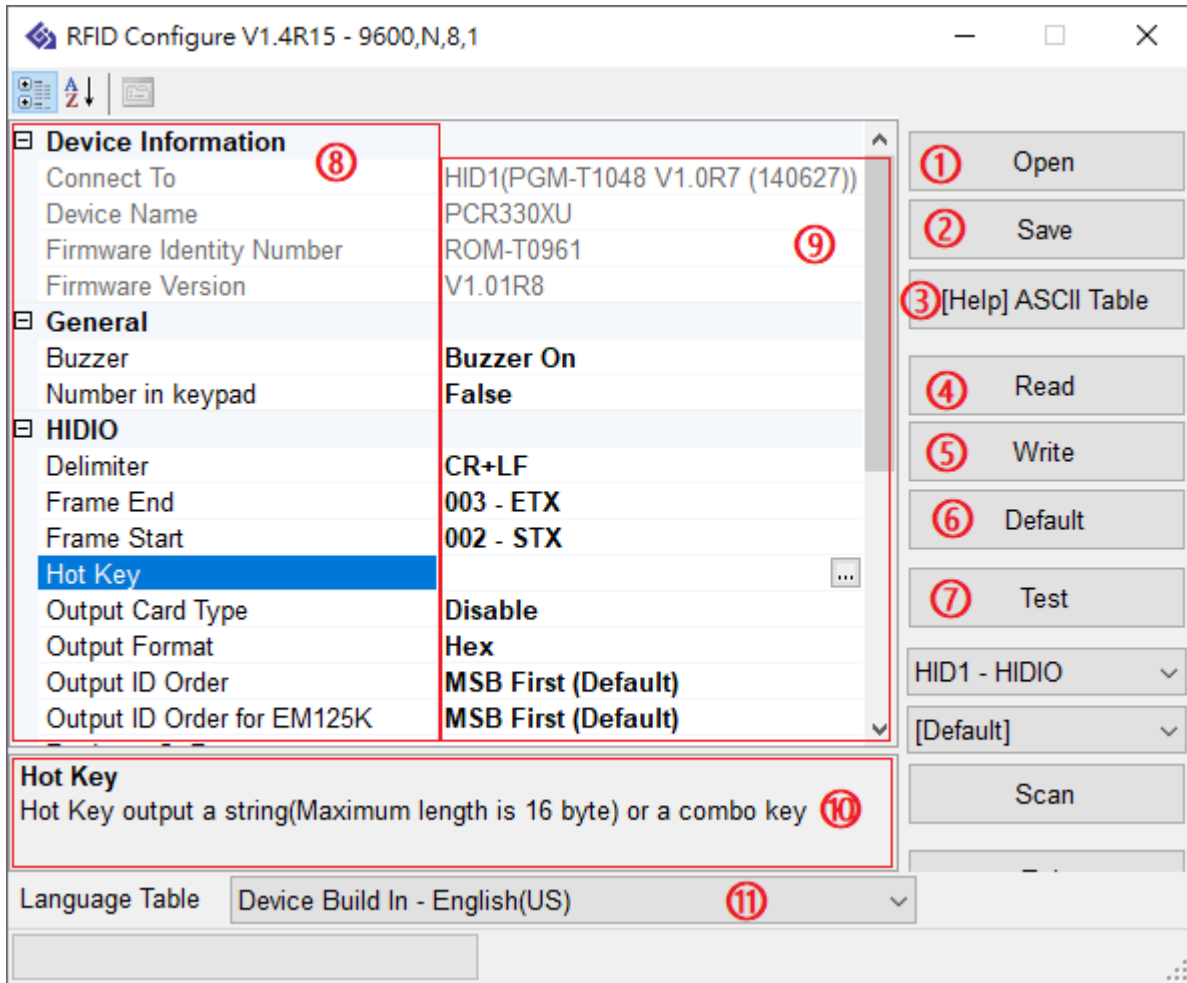

- ① Open and load the setting file.
- ② Save settings to the file.
- ③ Show the ASCII table on another window.
- ④ Read settings from the device.
- ⑤ Write settings to the device.
- ⑥ Restore default (factory) settings.
- ⑦ Show the test window.
- ⑧ All the properties you can configure.
- ⑨ The corresponding value of the property.
- ⑩ The description of the property you select.
- ⑪ The output language of the device.

· **Output testing window**

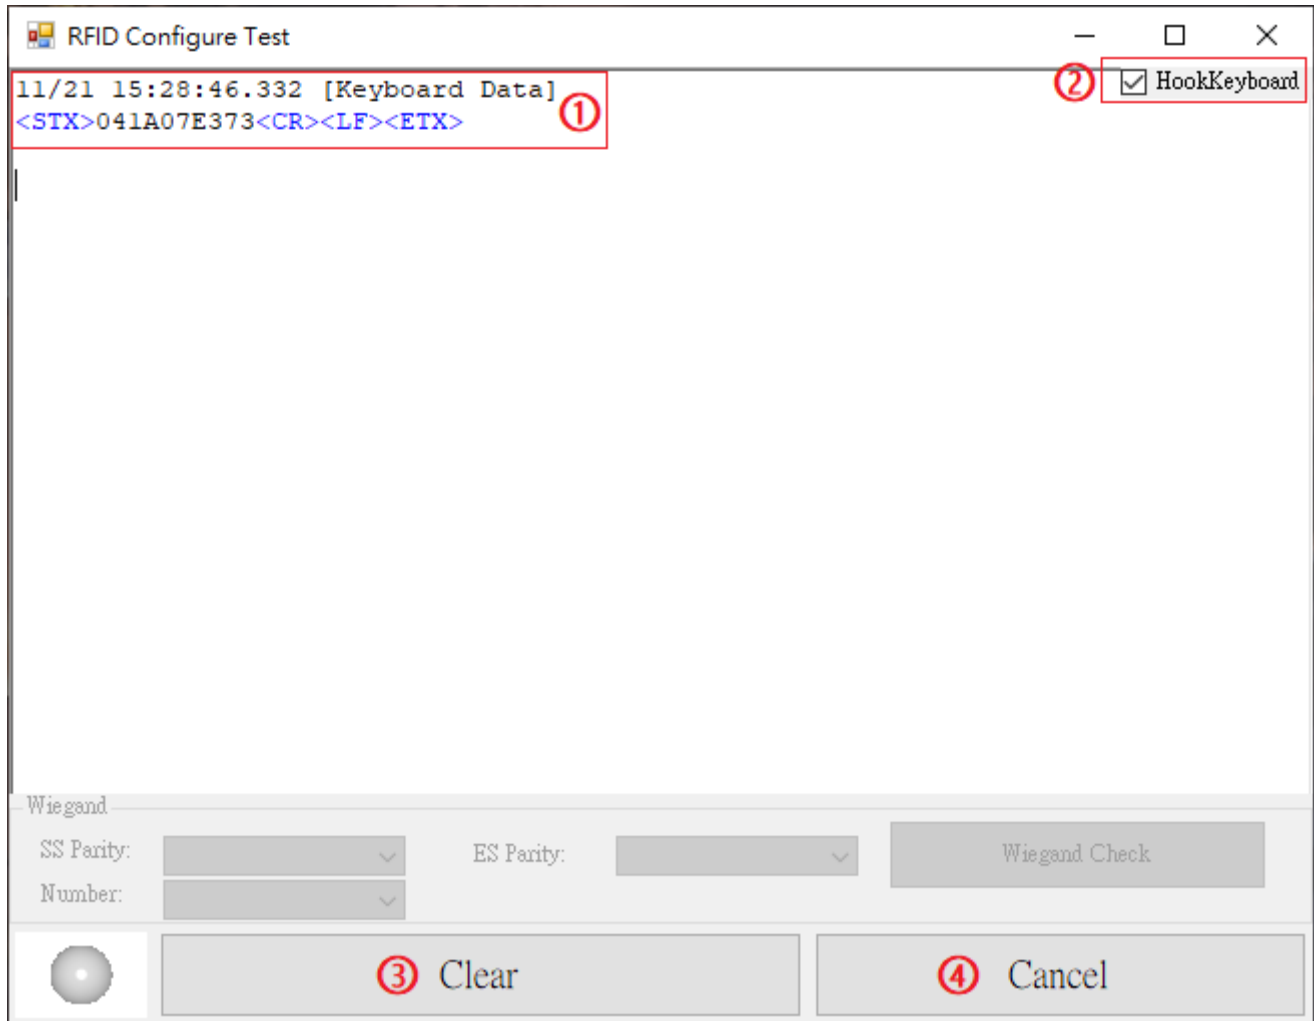

- ① The tag-reading result.
- ② Hook / Unhook the physical keyboard.
- ③ Clear the test log.
- ④ Close the test window and back to configure the device.

• **Update History**

20,11,2019 release

- Version 1.0.0
- The corresponding version of software is V1.4 R15.