



1. Connect the RF10/20 unit with your computer.

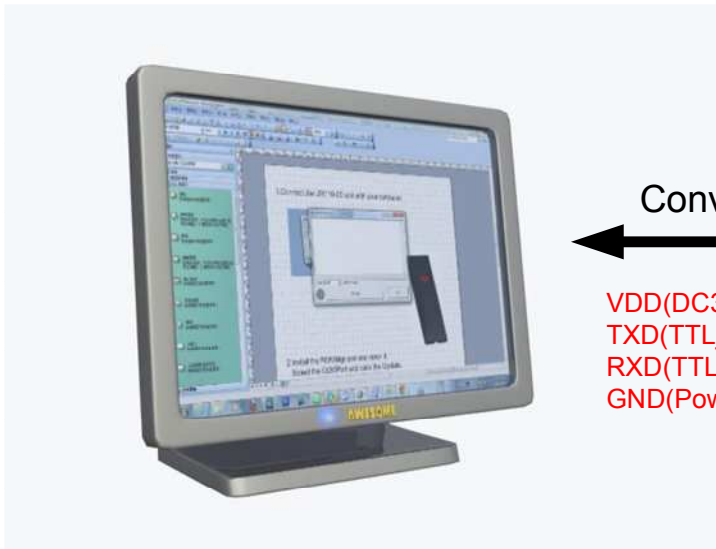


Convert

VDD(DC3.3V~5V)
TXD(TTL_TXD)
RXD(TTL_RXD)
GND(Power Grand)



RF10 Serial

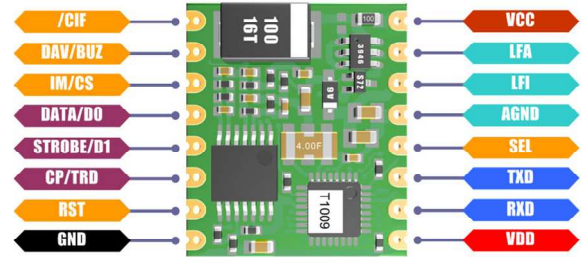


RF20 Serial

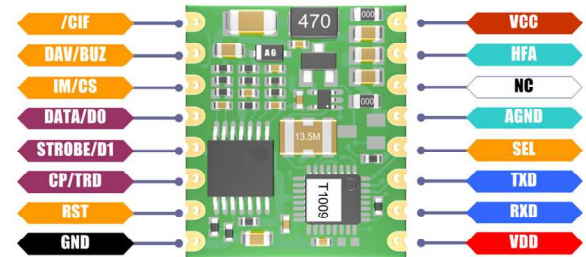


2. Install the SetRegistersSetup.exe and open it,
Select the Baudrate and click **Select**.

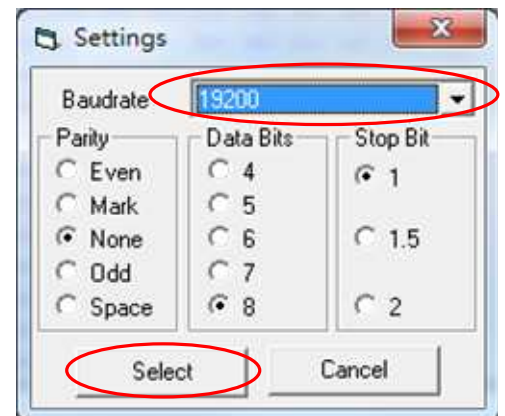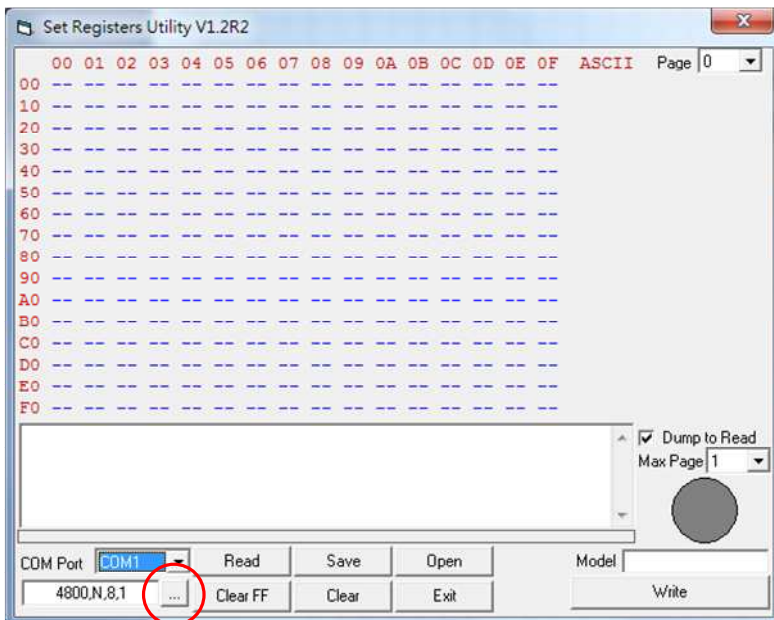

3. Click **Open** and Select the ROM-T1260.ini

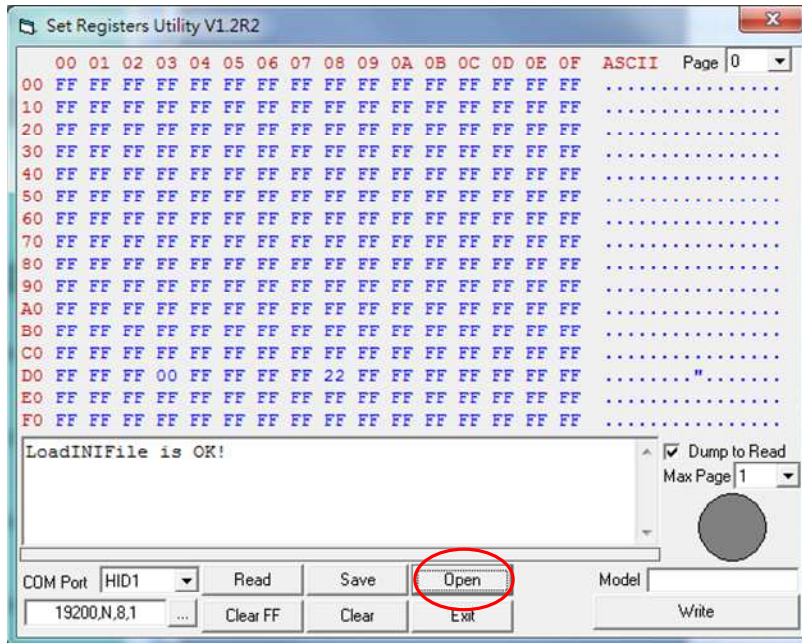

4. Click **Clear FF**

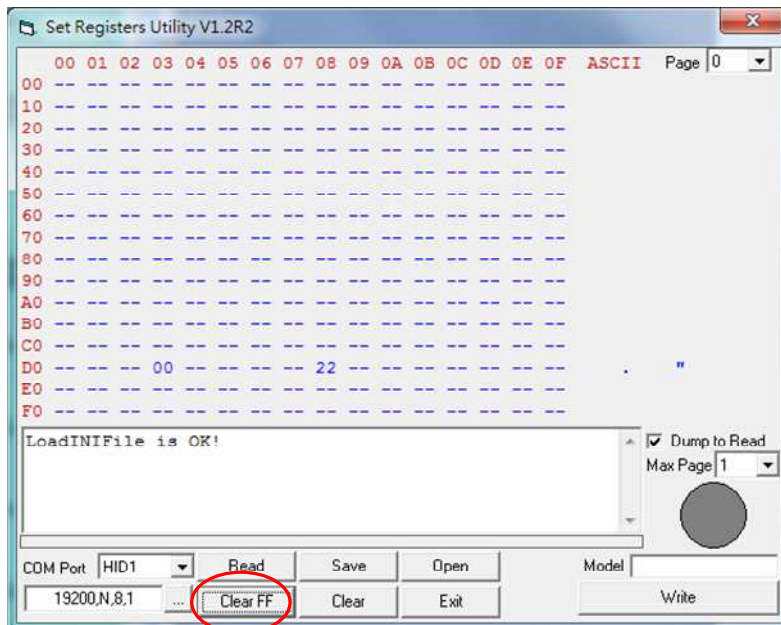

5. Click **Write**, green light on, then finished.

